

Mimir / LOIS Quick Start Guide

Table of Contents

A. Starting MOVE, Telescope, Dome, & Guider	2
1. Awaken MOVE, Telescope, and Dome.....	2
2. Calibrate Guider, if necessary, using the “GOS” Command.....	2
3. Selecting and locking a guide star	3
4. If the Guider Goes Crazy	3
B. Starting LOIS for Mimir	3
1. Start LOIS on the Mimir (array control) computer	3
2. Configure LOIS for Mimir.....	4
3. Take some test images to verify Mimir is working	4
4. Open the Relative Move and Focus Move windows	5
C. Find and Launch Mimir Scripts	5
1. Enter the Mimir script directory	5
2. Compile Mimir scripts	5
D. Slit/Decker Control & Filter Position Recalibration	6
1. Open a window to the yggdrasil (Mimir motor control) computer	6
2. Clearing the Slit and Decker cars to allow Imaging	6
3. Positioning the Slit & Decker Cars for Spectroscopy.....	6
E. Taking Images with Mimir.....	7
1. Selecting Filter Bands.....	7
2. Selecting Detector Array Operating Parameters.....	7
3. Select Integration Time and Number of Exposures.....	8
4. Selecting the Coadd Number	8
5. SubFraming and Fowler Sampling	8
6. Taking an image.....	9
F. Telescope Motion & Focus Operations	9
1. Moving the telescope with LOIS	9
2. Focusing the Perkins Telescope with Mimir	10
G. Calibrations.....	10
1. “Bias” images.....	10
2. “Darks”	11
3. “Flats”	11
4. “Linearity”	13
H. Known Bugs & Problems	14
1. Hung Data Taking.....	14
2. Stuck Filter Wheels.....	14
3. Slit or Decker Car run into Hard Limit.....	14
4. LOIS hung or acting very strangely.....	15

A. Starting MOVE, Telescope, Dome, & Guider

1. Awaken MOVE, Telescope, and Dome

- Turn on Main Telescope Power with Red Rocker Switch on Gray console in telescope dome. Alarm will sound briefly, then go off.
- The "MOVE" computer should awaken in the control room
- If weather conditions allow it, open the telescope slit (Green button)
- Start the big fans on the East wall
- If the dome air temperature is within 1 degree F of the mirror temperature, then open the mirror covers, using the switch on the back of the telescope (if not within 1 degree F, wait until the sun is down and the air is cooling).
- Open the instrument cover by issuing an "OS" (open shutter) command from MOVE
- ~~Start the muffin fans on back of telescope, using the PDU (this seems to be counterproductive for Mimir, so don't turn on these fans unless the mirror is very warm compared to the dome air temperature - DPC).~~
- At MOVE keyboard, type "TR" to start telescope tracking; "DM" to start dome following
- Type "PP" to select/move to a bright star near the telescope position
- Use Mimir to take an image of the PP star, make relative moves as needed to put the PP star near/at the Mimir detector array center
- Type "UC" to update coordinates, type another "U" to make it so

2. Calibrate Guider, if necessary, using the "GOS" Command

- Focus the telescope for Mimir
- Center a bright star on the (512, 512) pixel on Mimir (+/- 5 pix)
- Zero the guider offsets by issuing a "GZO" command and selecting "yes" when prompted about zeroing the offsets
- Send the guider probe to the optical axis with a "GHO" (guider home) command
- If the bright star is far from the center of the guider TV display, then set guider offsets:
 - o Issue a "GSO" command
 - o Use the guider keys on the MOVE keyboard to center the bright star in the guider TV center
 - o Push the "F2" key to exit while saving the new offsets
- Run the "GOS" (guider offset and scale) command:
 - o Issue a "GOS" command to start the process
 - o Use the telescope slew buttons to move the star to the upper left (SE) region of the guider TV display (2/3 of the way out from the TV center)

Mimir / LOIS Quick Start Guide

- Push the "**Enter**" key to start the program running
- Do NOT "zero offsets" at the end of the GOS process.
- For really large mapping throws, follow the GOS run with a "**GEG**" run (follow the directions presented by GEG)

3. **Selecting and locking a guide star**

- When positioned toward a field of choice, ask the guider for a list of potential guide stars using "**GGS**" (get guide star)
- Select an appropriate guide star from the list
- The guider should move the guide star to near the center of the guider TV display
- Hit "**Enter**" (aka <CR>) if this guide star looks good (isn't doubled or too bright)
- Hit the **F5** key to cause the guider to find that star and drag it into the center of the TV display
- Hit the **F2** key to start guiding
- To stop guiding, hit **F2** or **ESC** keys
- If a guide star is already present in the TV display and you just want to restart the guider, type "**GLK**" to paint the guide box on the screen. You will still need to press the **F5** and **F2** keys to capture the star and start guiding
- Nice to know: "**GBX**" allows moving the guider box center to somewhere useful; "**GXY**" allows moving the guider star into the box; while in **GBX** or **GGS**, hitting the "**G**" (grow) key will cause the size of the guider box to increase; "**GIF**" allows setting the instrument field of view, ie the guider avoidance region – for Mimir this is 15 arcmin (the cross corner size, plus some margin).

4. **If the Guider Goes Crazy**

- Guide stars not appearing – try "**GIN**" to reinitialize guider
- If **GIN** fails, must redo **GOS** (see above)
- If the guider won't allow move to the next dither position, it is likely the guide star you selected is about to fall into an avoidance zone. Select a different guide star using **GGS**.

B. Starting LOIS for Mimir

1. **Start LOIS on the Mimir (array control) computer**

- At the Saturn Computer Console in the control room:
- Log in as "**obs72**"
- Open an X11 window
 - click on the "**X11**" icon in the bottom icon tray on the desktop
 - at the top of the desktop, select "**applications**"

Mimir / LOIS Quick Start Guide

- in the pull-down menu, select "**terminal**"
- In that X11 window, type "**telnet mimir**"
 - Log in to the mimir computer as "**obs72**"
 - Type "**ds9 &**" to launch the DS9 display
 - Type "**lois &**" to start LOIS
 - [as an alternative, you may instead type "**loismimir &**" which starts LOIS and puts you in the tcl script directory for Mimir.]

2. Configure LOIS for Mimir

- Make sure the guider is not guiding
- In the "**LOIS System Console**" window, click the green "**Configure**" button
- In the "**configlois**" window, select the following:
 - For "**Telescope Interface**", select "**Perkins**"
 - For "**Camera Interface**", select "**Mimir**"
 - For "**Instrument Interface**", select "**MimirInst**"
 - For "**Display Interface**", select "**DS9/XPA**"
 - Type in new values for "**Observer(s)**" and "**Affiliation**"
 - Click the green "**Start**" button at lower right
- Two new windows will open up: "**Perkins Telescope Control**" and "**Mimir IR Camera Control**"
 - Wait a minute for LOIS and MOVE to talk to each other, so to populate the "**Perking Telescope Control**" window with real telescope position data
 - An error message will appear in the "**LOIS System Console**" left hand window to the effect of "**Unable to identify the command: instrument_init**" – ignore this error message
- Set up the night's data directory
 - In the "**LOIS System Console**" window, click the gray "**Storage**" button on the top row
 - This brings up the "**store**" window
 - Change the "**Root File Name**" to tonight's UT date, in the form YYYYMMDD (e.g., **20060707**)
 - Change the "**Extension Number**" to "**001**"
 - Verify that "**Add the .fits extension**" and "**Autostore**" are both set to "**On**" (with a red dot next to "**On**")
 - Change the directory to reflect the root file name and full pathname. Generally this should look like "**/mimir/data/obs72/20060707**" for the example above
 - Click the green "**Apply**" button to make these changes and close the window

3. Take some test images to verify Mimir is working

- In the "**Mimir IR Camera Control**" window:

Mimir / LOIS Quick Start Guide

- Verify the number of exposures (“Num. of Exp.”) is set to “1”
- Verify the exposure time (“Exp. Time”) is set to “0.00”
- Click on the yellow “**Test**” button
- Messages will appear in the pale blue background right hand window of the “**LOIS System Console**”
- An image should appear in the DS9 display
- Each time LOIS is restarted, the very first image will show “jailbars” in the upper two quadrants. *This is normal*, though not understood. Take another image – it should look fine.

4. Open the Relative Move and Focus Move windows

- In the “**Perkins Telescope Control**” window, click on the gray buttons that say “**Rel. Move**” and “**Focus Move**”. This will open two smaller windows. Drag these somewhere useful on the desktop

C. Find and Launch Mimir Scripts

1. Enter the Mimir script directory

- If LOIS was launched using “**loismimir &**” LOIS is already in the correct directory.
- If LOIS was launched using “**lois &**”, then in the left hand (gray with blue letters) window of the “**LOIS System Console**” main window, type “**cd ../tcl.mimir**”
- Scripts must be compiled (“sourced”) before use
- There are many useful scripts already available, you are free to use them
- You may also write your own scripts – however, ***please DO NOT MODIFY scripts already in the tcl.mimir directory.*** Instead, copy a useful template script into a new filename, with a “.tcl” extension, edit the new file and save it in the tcl.mimir directory.

2. Compile Mimir scripts

- A very useful script is “**gpips.tcl**” which contains code that sets up most common filter configurations, most common spectroscopy configurations, polarimetry, bias, and other functions.
 - To use this script, in the left hand window of the “**LOIS System Console**” main window, type “**source gpips.tcl**”
 - Next, click the gray button on the top row of the “**LOIS System Console**” that says “**Show User Buttons**”
 - A column of buttons will appear – drag the column somewhere useful on the desktop

Mimir / LOIS Quick Start Guide

- The buttons have names like "**Set_Dark**", "**Set_J**" etc. These will move all filter wheels as needed to set up the dark condition, or J-band, H-band, etc.
- Clicking any of these buttons starts the filter wheels moving, echoes actions to the X11 window that launched LOIS, and for some button selections, populates the FITS headers.

D. Slit/Decker Control & Filter Position Recalibration

1. *Open a window to the yggdrasil (Mimir motor control) computer*

- From the Saturn desktop, open another shell/window (X11 or terminal)
- In that new window, type "**ssh camera@yggdrasil**"
- In the window, type "**cd /home/camera/buie**"
- The slit & decker cars and camera motions are run from this window.

2. *Clearing the Slit and Decker cars to allow Imaging*

- If the slit and decker cars are already out of the imaging beam, great, skip this step
- If either the slit or decker cars are in the optical path, they need to be sent to their "home" position(s)
 - To send the decker car home, in the **yggdrasil** window, type "**plate d h**"
 - Messages and dots will appear in the yggdrasil window as the decker moves.
 - The decker should move out of the optical beam in about 30-40 seconds.
 - To send the slit car home, type "**plate s h**"
 - This will take a longer or shorter time than the decker, depending on which slit was selected.
 - Take a short image to verify that both cars are out of the beam.
 - If they are not out of the beam, it is possible one or the other may have been driven into a software or hardware limit and will have to be extracted. **See Section H.3 (page 16)**

3. *Positioning the Slit & Decker Cars for Spectroscopy*

- After pointing the telescope to the desired field, a guide star has been found, and guide lock established, spectroscopy may be set up:
 - For JHK spectroscopy, set the filter wheels to allow H-band imaging (press the "**set_H**" user button)
 - Locate the object of interest and use the relative move window to place the object onto pixel (512, 545). [The plate scale of

Mimir / LOIS Quick Start Guide

Mimir is 0.579 arcseconds per pixel, and Mimir is rotationally aligned with the equatorial system.]

- o Position the decker over the field center:
 - With the decker car at home, type "**plate d 304**"
 - This should move the decker car to the center of the FOV.
 - Take a short image – the decker FOV is 25" x 5.3' and should be apparent.
 - If the center of the decker opening is at column 511 (+/- 1 pixels) in the DS9 display, it is centered.
 - If not, it may be necessary to move the decker by one or more "detents". Each detent motion moves the decker by 3.5 columns of pixels. Issue commands like "**plate d 307**" or "**plate d 303**" to cause the decker to move to the right or left by one detent from nominal. Take more images and continue moving the decker until it is properly positioned.
- o Position the slit over the field center:
 - This is identical to the decker motion, but using the slit car
 - If using the S1 slit (1.2" x 5'), type "**plate s 189**"
 - Take an image and move the slit to the right or left by detent number as needed
 - Try to get the slit as close to column 511 as the detent system will allow (ie. Within 2 pixels).
 - Compute the relative motion needed to move the star/target from its pixel location to the slit, and issue a relative move to do so.
- o Select the proper spectroscopy grism and filters
 - For JHK spectroscopy, select the JHK grism and 1.17um LP filter by clicking the "**set_JHK_spec**" user button
 - For J-spec, K-spec, LM-spec, etc. spectroscopy, select their corresponding user buttons.

E. Taking Images with Mimir

1. *Selecting Filter Bands*

- To select filter-based imaging, click on the relevant user button (e.g., "**set_J**" for J-band)

2. *Selecting Detector Array Operating Parameters*

- In the "**Mimir IR Camera Control**" window, click the gray button in the upper left, marked "**IR Config**"
- A pull-down menu appears, with three choices; "**quadrants**", "**CDS**", and "**Readout Mode**"
- Verify that "**quadrants**" is set to "**All Quads**"

Mimir / LOIS Quick Start Guide

- Verify that "**CDS**" is set to "**ON**" for correlated double sampling data collection (that is, reset-read-integrate-read mode), or "**OFF**" if you are working with high backgrounds, as seen for L & M imaging. In this case, the data collection mode is "reset-integrate-read".
- Verify that "**Readout Mode**" is set to "**Clean/Low Noise Mode**" if doing imaging in the J, H, or K bands or spectroscopy in any band or polarimetry in the H-band.
 - This option sets the photoconductor reverse bias. We have determined the "clean/low" mode is best for most Mimir modes.
 - However, for L & M imaging, another mode exists that exhibits deeper pixel wells, though with higher dark current. For that mode, select "**Deeper Well/High Noise Mode**"

3. *Select Integration Time and Number of Exposures*

- The integration time is set by typing a value into the box in the "**Mimir IR Camera Control**" window's sub-window marked "**Exp. Time:**"
- The number of consecutive exposures Mimir will obtain is set by typing an integer number into the similar box marked "**Num. of Exp:**"

4. *Selecting the Coadd Number*

- Multiple exposures may be combined into a single stored image by putting a non-unity number in the green box in the "**Mimir IR Camera Control**" window labeled "**Coadds**".
- To register a user initiated change to the number of coadds, after entering a number in the green box, you must hit "**Enter**" (e.g., <CR>) on the keyboard

5. *SubFraming and Fowler Sampling*

- **SubFrames** - The subframe location is centered on the array center, with the X and Y dimensions set by the user. The X size is a multiple of 16. The Y size must be a multiple of 4. SubFraming is NOT set through the Mimir GUI. Instead, to set up subframing:
 1. In the "LOIS System Console", put the mouse cursor in the middle window (blue letters and gray background)
 2. Type "**subframe sub=15 xsize=160 ysize=80**"
 3. This will reconfigure LOIS to collect images of size 160x82 (two extra rows are always read out)
 4. The "sub=subnumber" parameter allows the user to store up to 255 different subarray setups - once a subnumber is established, it is not necessary to retype the X and Y sizes

To recover the full array size, set sub=0, as:

Mimir / LOIS Quick Start Guide

5. "subframe sub=0"

Fowler Sampling – Read noise may be reduced by performing multiple reads at the beginning and end of an exposure - this is "Fowler Sampling." For Mimir, the maximum number of Fowler samples is 16. To set the number of Fowler Samples:

1. In the "LOIS System Console", put the mouse cursor in the middle window (blue letters on gray background)
2. Type "**ir_config nfws=4**" - for 4 Fowler Samples, say.
3. The number of Fowler Samples is echoed in the status line of the "Mimir Camera Control" GUI - look for "NFWS=4"

To return to single Fowler sampling:

4. Type "**ir_config nfws=1**"

6. Taking an image

- Image taking may be started by pressing either the yellow "**Test**" or green "**Go**" buttons at the bottom of the "**Mimir IR Camera Control**" window, or by the action of scripts
- Pressing the "**Test**" button takes one or more images and creates a file named "test.fits" to contain the result
- Pressing the "**Go**" button creates consecutively numbered images, based on the root file name established in the storage set up step.

F. Telescope Motion & Focus Operations

1. Moving the telescope with LOIS

- LOIS moves the telescope with either absolute or relative moves.
- For absolute moves to a celestial coordinate:
 - o In the "**Perkins Telescope Control**" window, click on the gray "**Coord. Move**" window
 - o A new window will appear in which RA and Dec values may be typed
 - o When the coordinate boxes have been filled in, click the green "**Move**" button
 - o A red warning message will appear to remind you that it is your responsibility to ensure the safety of the telescope and Mimir – screw up and you are decertified for Mimir use.
 - o If the slew from the current position is short enough, clicking the "**OK**" button will cause the telescope to start moving.

Mimir / LOIS Quick Start Guide

- For longer slews, MOVE will put up a message reminding the user that the slew is large and so is a “delayed slew” that requires the user to go into to dome and press the green “**slew permit**” button just outside the control room. → watch the telescope move and abort it by pressing the red “**abort**” button above the green button if something doesn’t look right or safe ←
- For relative moves:
 - In the “**Relative Move**” window, fill in the relative RA and Dec motions (both in arcseconds on the sky) and press the green “**Move**” button
 - The telescope will move without sending any messages

2. *Focusing the Perkins Telescope with Mimir*

- The Perkins telescope has some astigmatism and Mimir’s optics are very sensitive to focus changes, so it is easy to focus the Perkins for Mimir without resorting to automated routines.
- Take a direct image with Mimir, of duration at least 1 second while under guider lock
- Use the DS9 display to examine the upper left corner of the Mimir image, especially looking into the DS9 zoom window
- When in focus, all stars in this corner of the array are round
- When out of focus, these stars are elongated
- If the elongation points to the array center, the current focus value is too small and needs to be increased.
- If the elongation points tangential to the direction to the array center, the current focus value is too high and needs to be reduced.
- We have found that focus changes of 50 units are easy to detect, but changing by less than 25 units will be undetectable.
- The focus is quite sensitive to mirror and air temperature and changes on 15-20 minute time scales, so frequent focus checks will ensure that only high quality data are obtained.

G. Calibrations

1. “*Bias*” images

- Should be taken frequently, as often as every 15 min or so. These are fast, but vital to the linearity correction for your data.
- An easy way to take biases is to use the “**go_bias**” button on the button stack generated by the **gpips.tcl** script and “**Show User Buttons**”.
 - Put a value like 16 or 32 in the box next to the **go_bias** button, click the button and watch magic happen!

Mimir / LOIS Quick Start Guide

2. “Darks”

- Mimir’s dark current is NOT linear with time - you **must** take dark frames with exposure times identical to the exposure times of your science images.
- An easy way is to do a **go_bias** run, then change the Object Title to “Dark”, change the integration time, number of frames, and click “Go”. To reduce the readout noise contributions to dark frames, take either 16 or 32 darks at each exposure time.
- If not using go_bias first, click the “**set_Dark**” button in the button stack to put in a dark in FW1, then set up the exposures you want.

3. “Flats”

- For ***JHK imaging*** with the F/5, or F/17, camera, use dome flats:
 - Do this at night, so that stray light is not a problem
 - Command MOVE to the flat-field screen with a “FS” command
 - Set the flat field lamp switch to “Narrow Band” (the white light controlled by the black knob) and “On”
 - Set the Illuminator (black knob), following the table below
 - Turn lamps on and off using the PDU window on Saturn

Band	F/5		F/17	
	Illuminator Setting	Integration Time [s]	Illuminator Setting	Integration Time [s]
J	18	5.0	30	5.0
H	18	0.7	30	1.0
K	18	0.7	30	1.5
H2-On	25	4.0	60	10
H2-Off	25	4.0	60	10
POL-H	18	1.5	TBD	TBD

- For ***L&M imaging***, building flats from dithered sky images is better.
- For ***JHK spectroscopy***, do “in situ” flat-fielding:
 - Before starting spectroscopy, set up the flat field lamp:
 - “Narrow Band”
 - Illuminator setting = 100 (full on)
 - Flat lamps turned off at the PDU window
 - Point to target, collect spectra as desired
 - After collecting the spectra of the target, break guide lock on the guide star (“Esc” key)
 - Turn off tracking and dome following by issuing a “TR” command, followed by a “DM” command
 - Turn on the flat lamps, using the PDU window

Mimir / LOIS Quick Start Guide

- Rotate the dome to completely cover the telescope aperture (check by going out in the dome)
 - Collect "Lights On" continuum lamp flats (3 sec integration time, typically 5 exposures)
 - Use the PDU to turn the flat lamps off, collect "Lights Off" spectral images of the same exposure time and frame numbers as for lights-on
 - Position the Argon lamp over Mimir's front window, using the "**GAF**" command in MOVE
 - Turn on the Argon lamp, using the PDU
 - Collect Argon lamp images: 5 exposures of 5 seconds each
 - Clear the Argon lamp out of the beam, by again issuing a "**GAF**" command in MOVE
 - Take bias images, using **go_bias** (16-32 images)
 - Turn on tracking ("**TR**") and dome following ("**DM**"), and proceed to your next target
- For **LM Spectroscopy**, use A-B dithering to build sky flats, OH lines and transmission to establish wavelength calibration (the Argon lamp quartz glass is opaque to LM wavelengths, so don't bother trying to get LM Argon lines...)
- For **H-Band Polarimetry**, the following will provide a set of polarimetric flats sufficient to achieve 0.8% photometric uncertainty in each pixel for each HWP, or under 0.01% polarization uncertainty for stars spanning 16 pixels (about 1.6 arcsec FWHM). For cruder uncertainties, reduce the number of exposures or number of cycles (step 9).

As a benchmark, the full set of observations takes about 2 hours of clock time.

1. Set up Polarimetry Mode
 1. In LOIS window, "**cd ../tcl.mimir**" then "**source gpips.tcl**"
 2. Click "**Show User Buttons**"
 3. Select H-band filter, PK50 blocker, H-band Half-wave Plate, and Wire Grid Analyzer
 1. Click the "**set_POL**" button
 4. Test the HWP rotation
 1. Click the "**pol_reset**" button
 2. Put the black knob setting to "**18**" with the illuminator lights turned on to the **narrow band** setting
 3. Set the integration time to 1.5 sec

Mimir / LOIS Quick Start Guide

1. Take a test image - the mean counts should be around 4,000 ADUs. If greatly different, adjust either the light setting or the integration time to achieve a mean of about 4,000 ADUs.
4. Run the **pol_FF_cal** polarimetry data collection script
 1. Do a "**go_bias 32**" first
 2. Edit the object title to say "**Pol Flat Lights On**"
 3. Find the "**pol_FF_cal**" user button and set the exposure time ("expt") to 1.5 and the number of exposures ("nexp") to 4
 4. Click this button to collect 32 biases, then the polarimetry data and to move the HWP to different positions taking 4 exposures at each position
5. After the script ends, click the **pol_FF_cal** button, again with the lights still on
6. Turn the illuminator lights off
7. Run **pol_FF_cal** twice with the lights off (edit the object title to "**Pol Flat Lights Off**")
8. Repeat steps 5-8 three times, totaling 32 lights on and 32 lights off images at each of 16 HWP angles.

4. "Linearity"

- Mimir's detector is intrinsically non-linear and you must calibrate its response to linear steps in light levels if you want useful data. A script has been developed to do the hard work for you:
- "**LinDat_Lts_On**" will collect linearity data for you with the flat-field lights turned on – if linearity data is all you need, you will not need to collect any "lights-off" data.
 - o Set the flat lamp illuminator knob to a setting of "**18**"
 - o Turn on the flat lamp using the PDU window
 - o Set the filter to J-band (click the "**set_J**" button)
 - o Take a 5 sec test image – the center of the image should show about 5,700 counts
 - o In the "**LinDat_Lts_On**" button windows:
 - Enter a **maxT** value of **16** to indicate the maximum exposure time will be 16 seconds
 - Enter a **n_steps** value of **50** to indicate that data should be collected over 50 illumination steps from zero to **maxT** seconds (51 images)
 - Click the "**LinDat_Lights_On**" button to start the routine:
 - The routine will take 10 sets of 16 bias frames and **n_steps+1** exposures.

Mimir / LOIS Quick Start Guide

- If you select **n_steps** of 50, this normally means you will collect $10 \times (16 + 51) = \mathbf{670}$ images!
 - If you have selected **maxT** of 16 seconds, you must allot about $10 \times (51 \times 8 + (51 + 16) \times 2.3) = \mathbf{\underline{5,620 \text{ sec or a tad more than 1.5 hours}}}$ for this data collection.
 - Don't cheat! But, if you can't get this done, contact someone about borrowing some recent linearity data or tables.
- "**LinDat_Lts_Off**" if you want to measure the read noise and conversion gain, you will need some lights-off images to be able to remove the dark current from the lights-on images. This routine does only 4 cycles through your n_steps samples. Normally, you won't need to run this routine.

H. Known Bugs & Problems

1. Hung Data Taking

- Communication over the data fiber from the instrument to the mimir computer seems to hang up about once every 800-1000 images
- If you see the exposure timer failing to count down, or telescope dithering seems to have halted, it is likely due to this communication error.
- Go into the computer room, to the back of the first rack. The mimir computer is in the middle of the back side of the first rack. Locate the "**white button**" on the back side of the computer, next to the fiber optics connections.
- Press the "**white button**" once – this generally cures hung data problems.

2. Stuck Filter Wheels

- If one or more wheels fails to move after repeated attempts, call for help.

3. Slit or Decker Car run into Hard Limit

- Point the telescope to the Zenith with the "**ZE**" command
- Go out into the dome stare at the Mimir electronics and locate the units that have "Slit" and "Decker" written on them. They should also each have one red button and one black button at the bottom of each unit.

Mimir / LOIS Quick Start Guide

- In the yggdrasil window, issue a "**plate d -5000**" or "**plate s -5000**" command, depending on whether the decker or slit is at its hard limit.
- Return to the dome and press the appropriate red button on either the decker or slit motor electronics unit
- Listen for the decker or slit to start moving.
- If the motion ceases, press the red button again.
- It may take several red button presses until the motor motion stays on
- Return to the control room and wait for the yggdrasil dots to finish. A status message may, or may not appear.
- Type "**plate d**" or "**plate s**" to query the status of the unit
- If the returned message is "... at home position" then you are done
- If not, it will generally indicate that it is at some step (detent) number.
- Note the number, add 150 to it and issue a "**plate d N**" command, where N is the sum of the number and 150
- When this finishes (and hopefully not landing back on the hard limit), issue a "**plate d h**" command to send the decker (or slit) home
- When this finishes, check that the car has cleared the beam by taking a short image
- If the decker or slit is still in the beam, repeat all the steps once more
- If that fails to get the car out of the beam, call for assistance

4. ***LOIS hung or acting very strangely***

- Exit or kill LOIS and restart